

# Garden Bench Swing

# 46

400 Centennial Drive + Pierz MN 56364 + PH: 320-468-0205 + Fax: 320-468-2755 + email:prairieleisure@hotmail.com

**TOOLS NEEDED:** 1/8" Allen Wrench (included)  
Adjustable Wrench

**PARTS INCLUDED:** Backrest  
Seat  
2 Arm Assemblies

**HARDWARE:** 4 - 2 1/2" Joint Connector Bolts  
4 - 2 3/4" Joint Connector Screws  
2 - 2" Carriage Bolts  
6 - Washers  
2 - Locking Nuts  
2 - 8' Chain Lengths



**✂ ASSEMBLY TIP:** For ease of assembly, finger tighten all fasteners first. Tighten securely after all parts are aligned. Do not over tighten. Holes are drilled to easily accept hardware. However, because of finish, the holes may be tighter than normal. Lightly tapping the hardware with a hammer will help with the assembly. Using some soap on the screws will make the job a little easier.



1. Attach the Seat to either Arm Assembly using the 1/8" Allen Wrench and (2) 2 1/2" Joint Connector Bolts. On the front end of the arm assembly, slide a 2" Carriage Bolt from the inside of the arm assembly to the outside. On the outside of the arm assembly; slip a washer onto the carriage bolt, then the first chain link and another washer followed by a locking nut. Repeat this step to fasten the other Arm Assembly to the Seat.
2. Carefully slide the Backrest between the two Arm Assemblies. Fasten the bottom of the back assembly first using a 2 3/4" Joint Connector Screw on each side of the arm assembly. Holes are pre-drilled.



For questions or replacement parts, please contact our office.

[www.prairieleisure.com](http://www.prairieleisure.com)

3. Before fastening the top of the backrest, slide the first chain link then a washer onto the 2 ¾" Joint Connector Screw so that the washer will be flush with the wood. Tighten any loose bolts and screws before use.



### **CARE INSTRUCTIONS**

Your new furniture requires very little maintenance. It may be washed with a mild detergent and water to remove surface dust and dirt. After prolonged exposure to the elements you may want to refinish it. We recommend lightly sanding it prior to refinishing, then use a cloth to remove the dust, refinish with a high quality exterior finish. It may be necessary at times to tighten the bolts and screws. It is normal for bolts to loosen somewhat in wood furniture. In northern climates, we recommend that the furniture be stored inside during the winter months.

### **LIMITED WARRANTY**

This product is warranted only against defects in materials and workmanship for one year following the date of purchase. This limited warranty is in lieu of all other warranties, expressed or implied, and no one is authorized to assume for the company any other liability in connection with their sale of this product. This warranty gives you specific rights and you may also have other rights, which vary, from state to state.