

Assembly Instructions for Porch Swing


The swing in the diagram is a 4' traditional style,
But the assembly is the same for all the different styles.

Tools needed for assembly:

#2 Square Drive Screwdriver
Hammer for tapping bolts and screws
Ratchet
1/2" Socket
7/16" Socket

- Step 1** Lay out all the parts and identify them by comparing them with the drawings.
- Step 2** Bolt the seat and back assemblies together with the 5-1/2" long bolts. (Hand tighten.)
Using (2) small washer on both ends.
- Step 3** Fasten the arm assemblies to the seat and back assemblies as shown, with four 3" bolts, with a washer under the nuts only. (Hand tighten.)
- Step 4** There are three lengths to the swing chain. The short end of the chain attaches to the back of the swing. Place the end link in between the washers. Tighten the 1/2" locknut (do not tighten the nut so tight that it restricts the movement of the chains). The medium length chain goes through the arm hole and attach to the bolt between the washers. The longest length of the chain will be used to hang your swing. Most people are comfortable with the back chain on the end link, but if you want more or less angle, adjust to suit yourself.
- (For the Sweetheart style only.)** Attach the heart board with the Sweetheart cutouts, to the top of the back, with the 1-3/4" screws provided. Leave the same space between it and the top slat, as there is between the rest of the slats. Cedar Swings and Things leaves this off to avoid damage from shipping.
- Step 5**

- When setting links for swings be sure to put on end link, not the middle of link.
- If you received our comfort springs, please look at the diagram on how to utilize the springs.

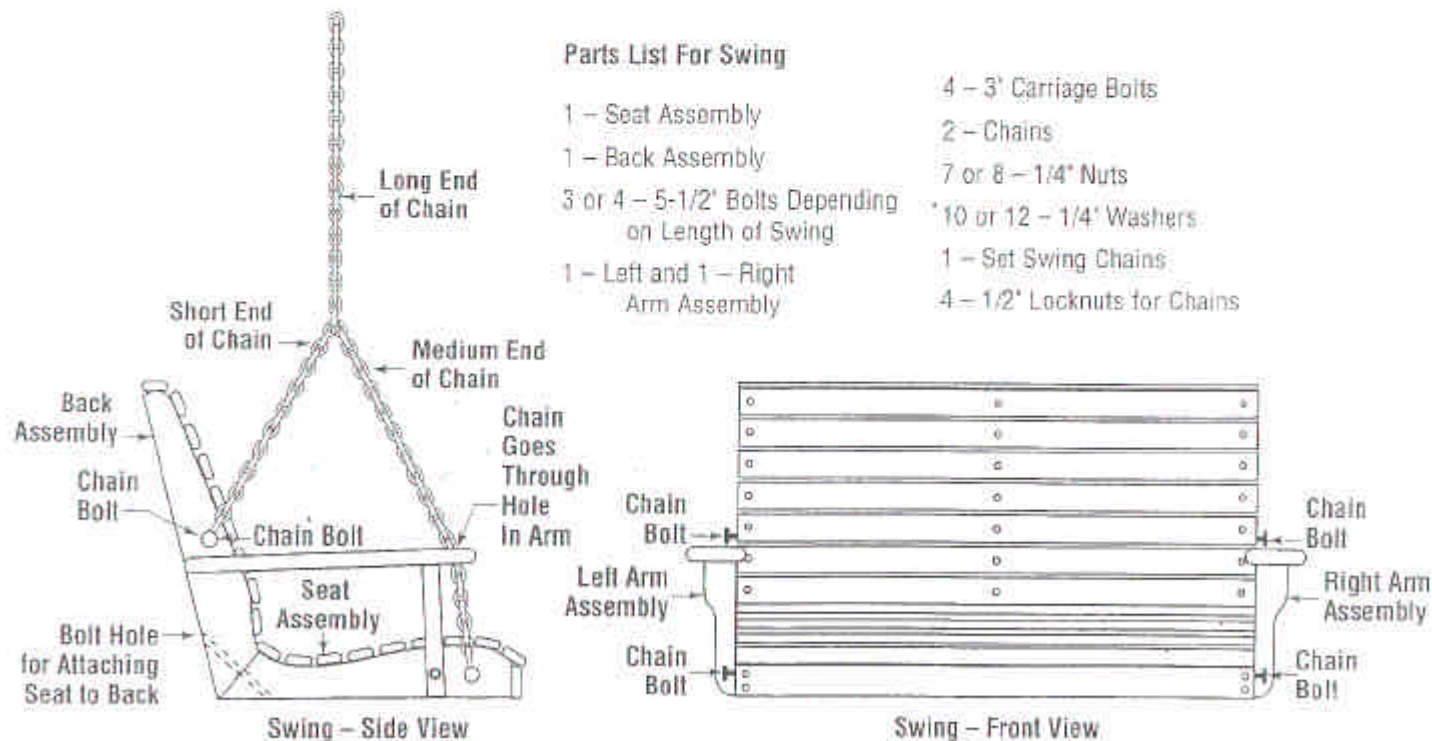

**Please take note that our comfort springs have a maximum weight limit of 300 lbs. (per spring)*