
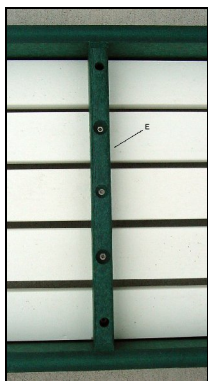


## 60" Backless Bench Assembly Instructions

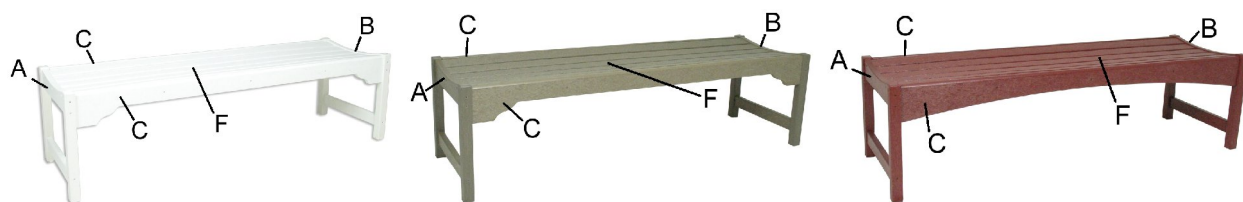

### Tools:

Square Drive Tip (included) with a Power Screwdriver  
(not included)

### Parts Included:

- A** End Assembly (1)
- B** End Assembly (1)
- C** Seat Rails (2)
- E** Under Seat Supports (3)
- F** Seat Slats (5)
- G** Colored 3" Screws (8)
- H** Colored 1½" Screws (12)
- I** Uncolored 2" Screws (15)
- J** Square Drive Tip for Power Screwdriver

### Instructions:

1. Lay End Assembly (A) on flat surface with mortise holes facing up. Insert Seat Rails (C) in mortise holes with metal facing in.
2. Insert Under Seat Supports (E) by spreading Seat Rails Apart and placing tenons in mortise holes.
3. Place Slats in End Assembly Mortise Holes and line up. Place other End Assembly on top while lining up slats and Seat Rails.
4. Locate Pilot holes and fasten top End Assembly to Seat Rails using 3" Screws (G).
5. Locate Pilot holes and fasten Slats to top End Assembly using 1½" Screws (H).
6. Flip bench over so other End Assembly is up and repeat Steps 4 & 5 on this end.
7. Flip Bench so that Seat Rail is facing up and attach Under Seat Supports to Seat Rail using 1½" screw.
8. Flip over and repeat step 7 on other side.
9. Turn bench upside down so that Under Seat Supports are visible and attach Under Seat Supports to Slats using 2" Screws (I).