

ASSEMBLY INSTRUCTIONS

A.	Cast Iron Ends	2
B.	Standard Slat	9
C.	Narrow slat	3
D.	Cross head bolts	24
E.	Nuts	24
F.	bracket	2
G.	Wood screws	24

Assemble Instruction

Before starting out and identify all the pieces. The three narrow slats are for the curved sections two on the front edge and one on the top edge. Make sure that you have a flat surface on which to assemble the seat.

1. Assemble the slats (B & C) to the cast iron ends (A) using the bolts (D) with the nuts (E) do not fully tighten the bolts at this stage. Ensure that two of the narrow slats are at the front edge of the seat and the is other at the top of the back rest. (Fig 1)
2. Check that the ends are at 90 to the floor, and that the ends are square to the slats (Fig 2)
3. Turn the swing upside down and attach the metal support straps to the underside of the swing. Position each strap along the 1/3 of the wood slats crossing over all 12 slats. Use the 24 self-tapping wood screws provided.
4. Tighten all the nuts .DO NOT OVER TIGHTEN.
5. Turn the seat back to the upright position.

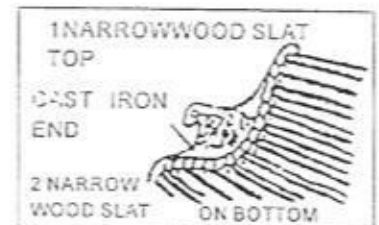


fig. 1

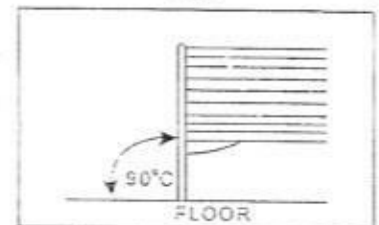


fig. 2

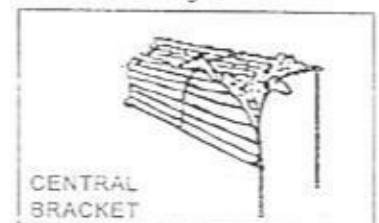


fig. 3