



ASSEMBLY INSTRUCTIONS
 Model GB48, GAC26, CB48, CAC26

STEP 1
 ATTACH THE SEAT TO THE SIDEFAMES
 USING (4) ¼-20 X 2½" BOLTS, WASHERS
 AND NUTS IN PREDRILLED HOLES (B)

DO NOT TIGHTEN


STEP 2
 ATTACH THE BACK & SEAT TO THE SIDEFAMES
 USING (8) #10X3 PAINTED SCREWS
 IN PRE-DRILLED HOLES (A)

TIGHTEN ALL SCREWS AND BOLTS

- (1) Seat
- (1) Back
- (2) Side frame
- (1) Hardware pack

TOOLS NEEDED

PHILLIPS HEAD SCREWDRIVER
 A SCREW GUN IS RECOMMENDED
 7/16 SOCKET DRIVER

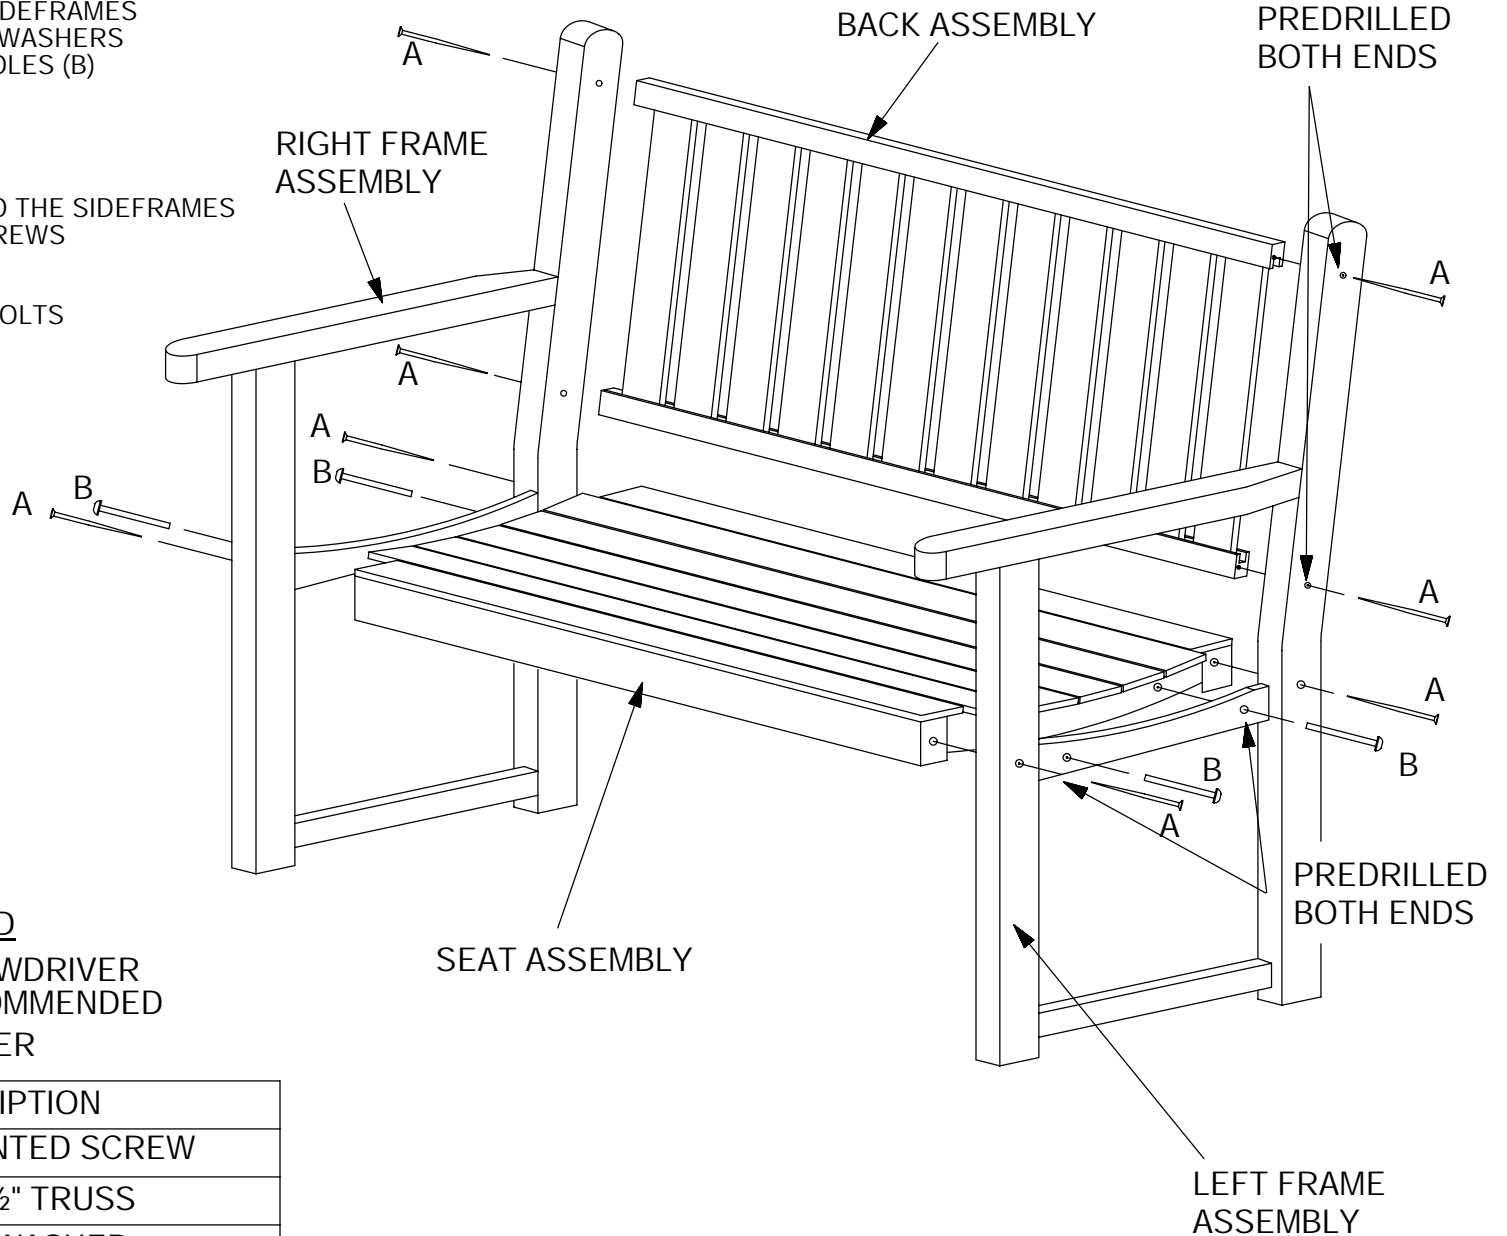

| LETTER | QTY. | DESCRIPTION |
|--------|------|----------------------|
| A | 8 | #10X3" PAINTED SCREW |
| B | 4 | ¼-20 x 2½" TRUSS |
| B | 4 | ¼" FLAT WASHER |
| B | 4 | ¼-20 LOCK NUT |