



Step 1

Attach the leg assemblies to table frame with table frame laying on a flat surface using (16) 2¼" Chair bolts. Do not tighten yet.


Step 2

Attach braces to the leg assemblies using (8) 2¼" Chair bolts.

Step 3


Set table upright and tighten all bolts.



- (4) Leg assembly
- (1) Table frame
- (4) Brace
- (1) Hardware pack

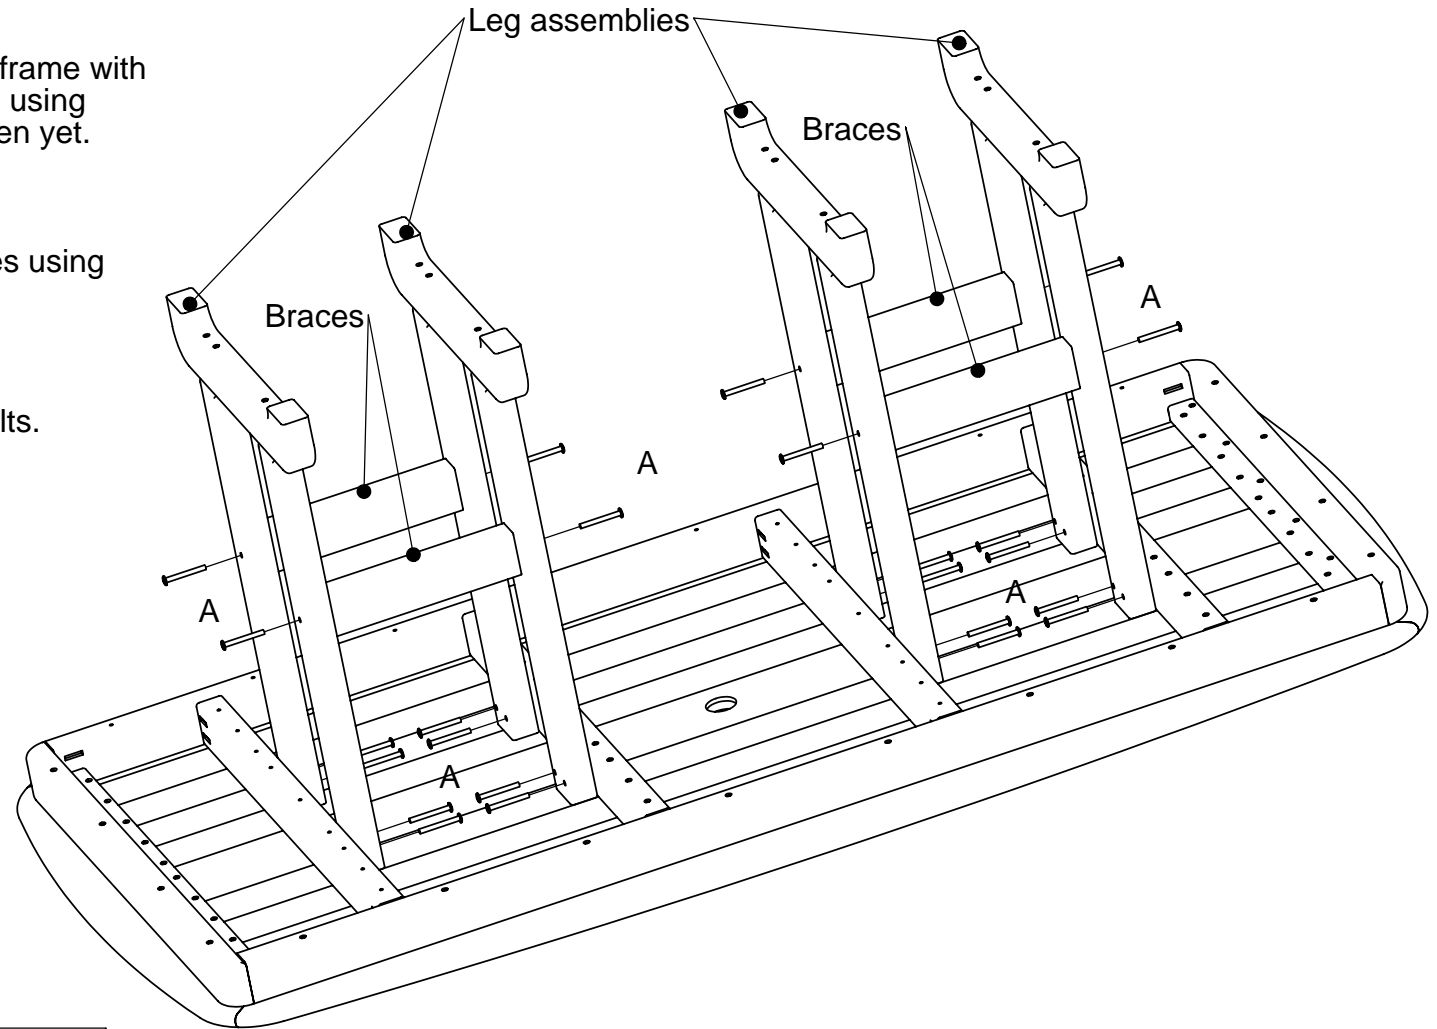

TOOLS NEEDED

5/32" HEX KEY: INCLUDED



Qty.	Description
1	 Table plug
24	 A - 2¼" Chair bolt

All bolts are 1/4-20